

# MSL / MSLS / MJBV series

BRASS SILENCER, CHECK VALVE



Order example:

MSL — B — M5

MODEL

S: S type  
B: B type

PORT SIZE



## MSL-B

Model	A	CH	D1	D2	F	H	L	N
MSL-B-M5	M5	8	5	4	5	20	12	3
MSL-B-01	PT 1/8	12	8	7	6	24	14	4
MSL-B-02	PT 1/4	17	12	10	8	30	18	4
MSL-B-03	PT 3/8	19	14	11	9	35	21	5
MSL-B-04	PT 1/2	24	19	15	10	44	28	6
MSL-B-06	PT 3/4	30	25	20	10	50	32	8
MSL-B-08	PT 1	36	30	25	12	63	43	8



## MSL-S

Model	A	CH	F	L	N
MSL-S-M5	M5	8	5	9.5	3
MSL-S-01	PT 1/8	12	6	12	4
MSL-S-02	PT 1/4	17	8	15	4
MSL-S-03	PT 3/8	19	9	17	5
MSL-S-04	PT 1/2	24	10	18.5	6
MSL-S-06	PT 3/4	30	10	21	8
MSL-S-08	PT 1	36	12	23	8

## MSL-B

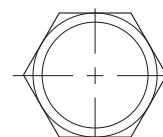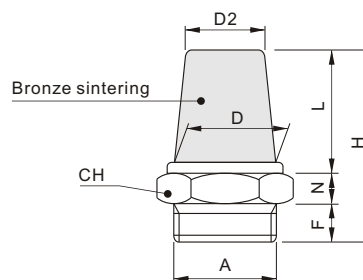


## MSL-S

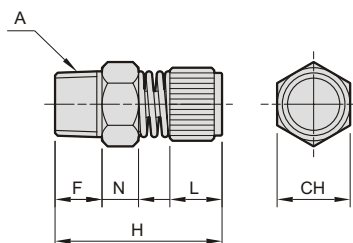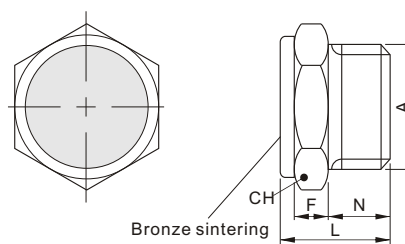

## MSLS-\*

Silencer throttle valve

Modle	A	CH	F	H		L	N
				Min.	Max.		
MSLS-01	PT 1/8	12	6	28	30	9	7
MSLS-02	PT 1/4	14	9	31	35	10	7
MSLS-03	PT 3/8	19	10	35.5	39	10	10
MSLS-04	PT 1/2	22	10	36.5	40	10	10

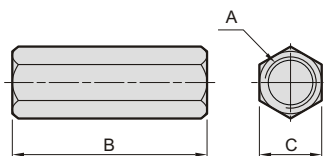

## MJBV-\*

Check valve

Modle	A	B	C
MJBV-01	PT 1/8	42	14
MJBV-02	PT 1/4	50	16
MJBV-03	PT 3/8	52	21
MJBV-04	PT 1/2	63	25